

ENGINE LUBRICATION & COOLING SYSTEMS



SECTION LC

CONTENTS

ENGINE LUBRICATION SYSTEM	2	CHECKING RADIATOR.....	11
Precautions	2	CHECKING RADIATOR CAP	11
LIQUID GASKET APPLICATION PROCEDURE	2	CHECKING COOLING SYSTEM FOR LEAKS.....	12
Preparation	2	Water Pump	12
SPECIAL SERVICE TOOLS	2	COMPONENTS	12
Lubrication Circuit.....	3	REMOVAL.....	12
Oil Pressure Check.....	4	INSPECTION.....	14
Oil Pump	4	INSTALLATION.....	14
REMOVAL AND INSTALLATION.....	4	Thermostat.....	16
DISASSEMBLY AND ASSEMBLY.....	5	REMOVAL AND INSTALLATION.....	16
OIL PUMP INSPECTION	5	INSPECTION.....	16
REGULATOR VALVE INSPECTION	6	Water Control Valve.....	17
OIL PRESSURE RELIEF VALVE INSPECTION		REMOVAL AND INSTALLATION.....	17
(FOR OIL COOLER).....	6	INSPECTION.....	18
OIL FILTER	6	Radiator	18
Oil Cooler.....	7	REMOVAL AND INSTALLATION.....	18
REMOVAL AND INSTALLATION.....	7	Cooling Fan Control System	19
Service Data and Specifications (SDS).....	8	Refilling Engine Coolant	19
OIL PRESSURE	8	Radiator (Aluminum type).....	20
REGULATOR VALVE	8	PREPARATION	20
OIL PUMP	8	DISASSEMBLY.....	20
ENGINE COOLING SYSTEM	9	ASSEMBLY	21
Precautions	9	INSPECTION.....	22
LIQUID GASKET APPLICATION PROCEDURE	9	Overheating Cause Analysis	23
Preparation	9	Service Data and Specifications (SDS).....	24
SPECIAL SERVICE TOOLS	9	THERMOSTAT	24
Cooling Circuit	10	WATER CONTROL VALVE.....	24
System Check.....	11	RADIATOR.....	24
CHECKING COOLING SYSTEM HOSES.....	11		

ENGINE LUBRICATION SYSTEM

Precautions

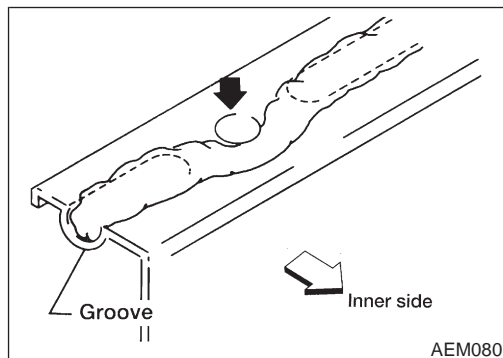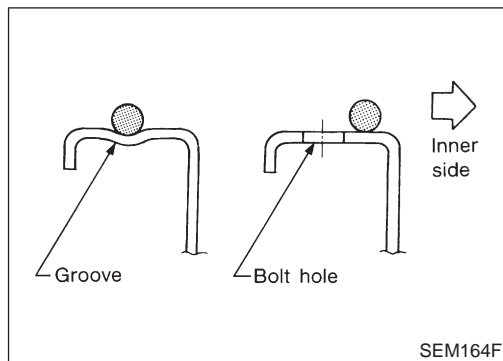

Precautions

LIQUID GASKET APPLICATION PROCEDURE

NFLC0001

1. Use a scraper to remove all traces of old liquid gasket from mating surfaces and grooves. Also, completely clean any oil from these areas.
2. Apply a continuous bead of liquid gasket to mating surfaces. **(Use Genuine Liquid Gasket or equivalent.)**
 - For oil pan, be sure liquid gasket diameter is 4.0 to 5.0 mm (0.157 to 0.197 in).
 - For areas except oil pan, be sure liquid gasket diameter is 2.0 to 3.0 mm (0.079 to 0.118 in).
3. Apply liquid gasket around the inner side of bolt holes (unless otherwise specified).
4. Assembly should be done within 5 minutes after coating.
5. Wait at least 30 minutes before refilling engine oil and engine coolant.

Preparation

SPECIAL SERVICE TOOLS

NFLC0002


Tool number Tool name	Description
ST25051001 Oil pressure gauge	<p>Measuring oil pressure Maximum measuring range: 2,452 kPa (24.5 bar, 25 kg/cm², 356 psi)</p> <p>NT558</p>
ST25052000 Hose	<p>Adapting oil pressure gauge to upper oil pan</p> <p>NT559</p>
WS39930000 Tube pressure	<p>Pressing the tube of liquid gasket</p> <p>NT052</p>

ENGINE LUBRICATION SYSTEM

Lubrication Circuit


Lubrication Circuit

NFLC0003

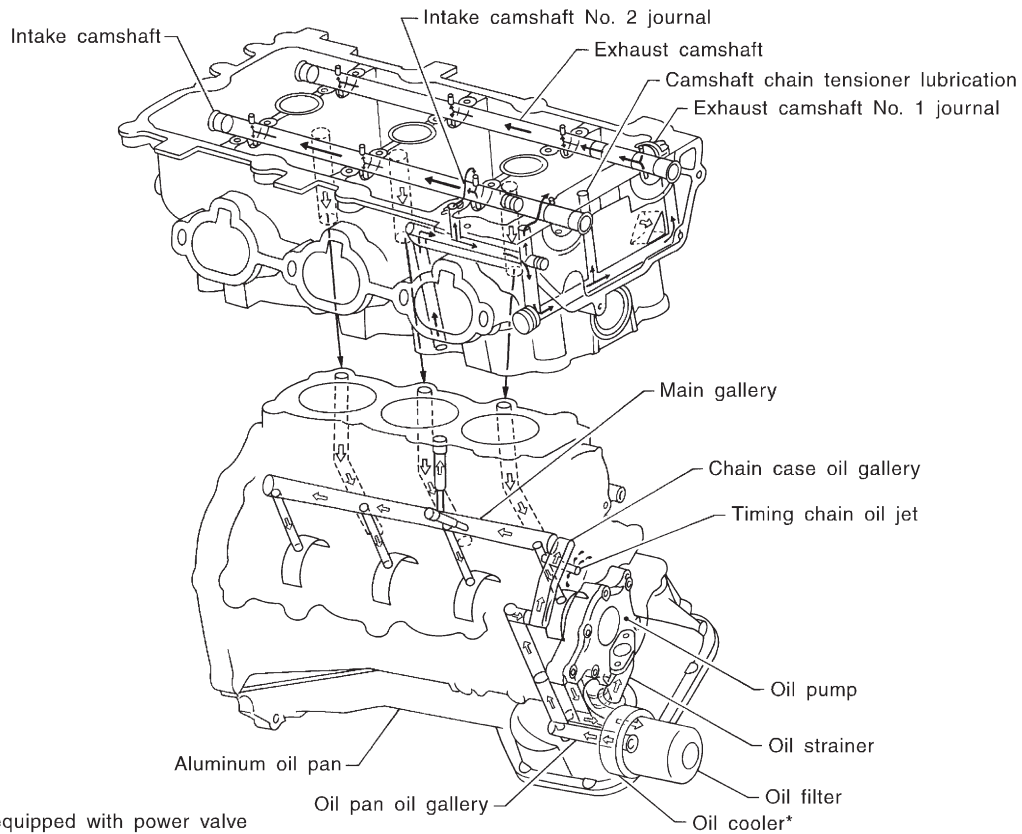

* : For models equipped with power valve

SLC026BA


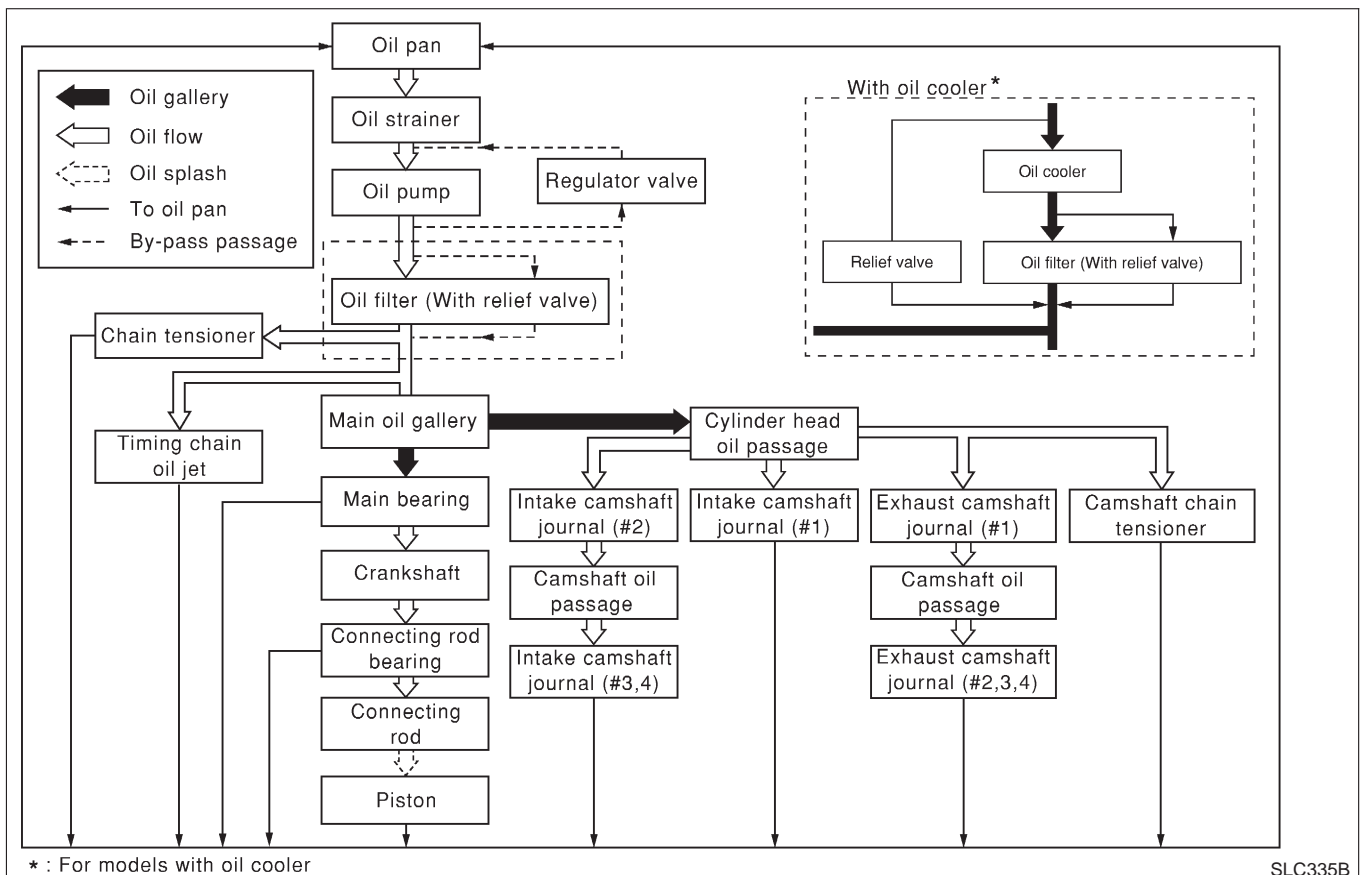


* : For models with oil cooler

SLC335B

ENGINE LUBRICATION SYSTEM

Oil Pressure Check

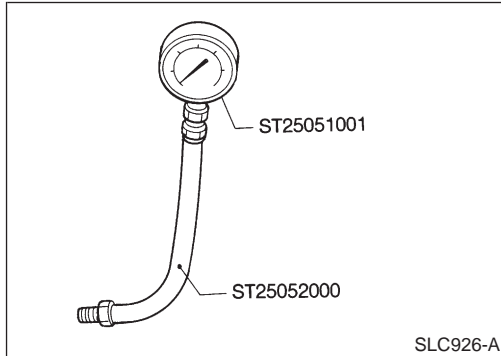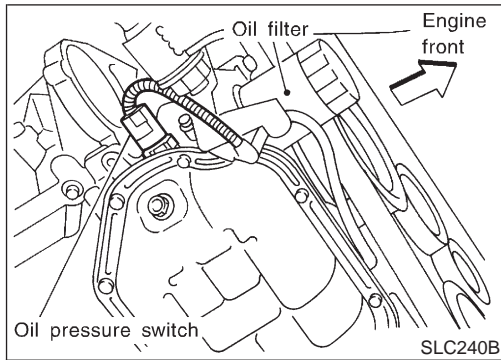

Oil Pressure Check

NFLC0004

WARNING:

- Be careful not to burn yourself, as the engine and oil may be hot.
- Oil pressure check should be done in "Neutral position" (M/T) or "Parking position" (A/T).

1. Check oil level.
2. Remove oil pressure switch.
3. Install pressure gauge.
4. Start engine and warm it up to normal operating temperature.
5. Check oil pressure with engine running under no-load.

Engine speed rpm	Approximate discharge pressure kPa (bar, kg/cm ² , psi)
Idle speed 2,000	More than 69 (0.69, 0.7, 10) 390 (3.90, 3.98, 56.6)

If difference is extreme, check oil passage and oil pump for oil leaks.

6. Install oil pressure switch with sealant.

Oil Pump

REMOVAL AND INSTALLATION

NFLC0005

CAUTION:

When removing the oil pans, oil pump assembly and timing chain from engine, first remove the camshaft position sensor (PHASE) and the crankshaft position sensor (REF)/(POS) from the assembly.

Be careful not to damage sensor edge.

1. Drain engine oil.
2. Remove drive belts.
3. Remove camshaft position sensor (PHASE), and crankshaft position sensor (REF)/(POS).
4. Remove engine lower covers.
5. Remove crankshaft pulley.
6. Remove front exhaust tube and its support.
7. Support engine at right and left side engine slingers with a suitable hoist.
8. Remove engine right side mounting insulator and bracket bolts and nuts.
9. Remove center member assembly.
10. Remove air compressor assembly and bracket.
11. Remove oil pans. Refer to **EM-12**, "Removal".
12. Remove water pump cover.
13. Remove front cover assembly.
14. Remove timing chain. Refer to **EM-21**, "Removal".
15. Remove oil pump assembly.
16. Reinstall all parts removed in reverse order of removal.


ENGINE LUBRICATION SYSTEM

Oil Pump (Cont'd)

DISASSEMBLY AND ASSEMBLY

NFLC0006

SEC. 150

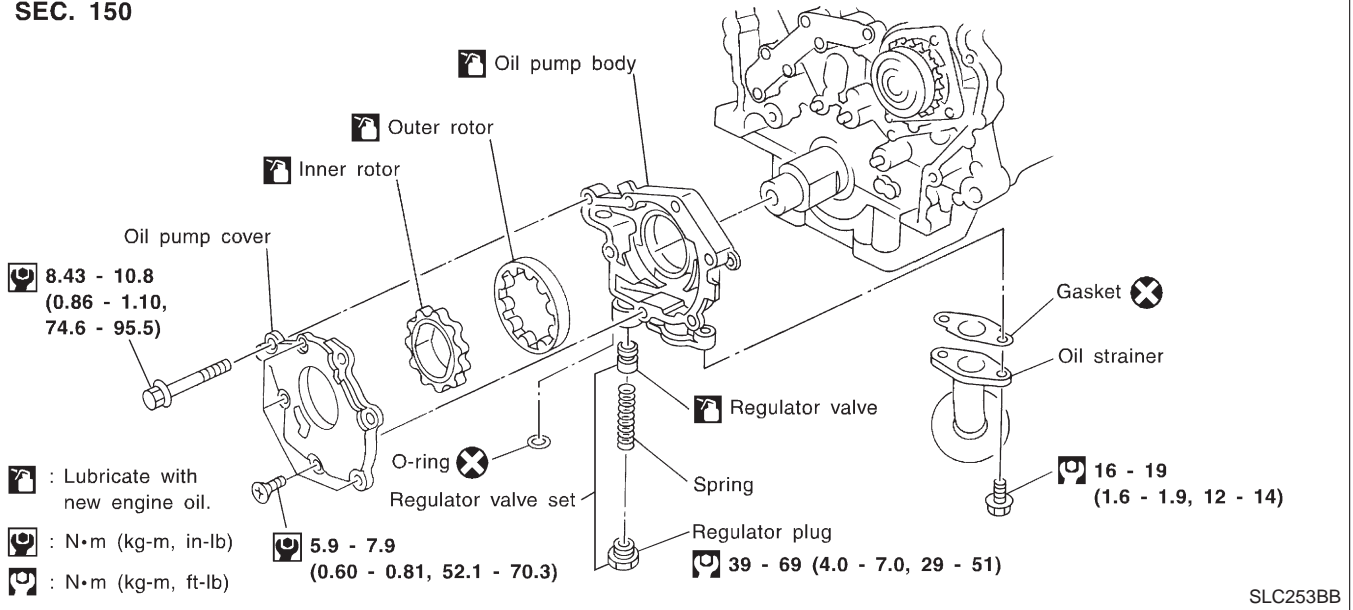

- When installing oil pump, apply engine oil to rotors.

OIL PUMP INSPECTION




NFLC0007

Using a feeler gauge, straightedge and micrometers, check the following clearances:

Unit: mm (in)


Body to outer rotor radial clearance 1	0.114 - 0.200 (0.0045 - 0.0079)
Inner rotor to outer rotor tip clearance 2	Below 0.18 (0.0071)
Body to inner rotor axial clearance 3	0.030 - 0.070 (0.0012 - 0.0028)
Body to outer rotor axial clearance 4	0.050 - 0.110 (0.0020 - 0.0043)
Inner rotor to brazed portion of housing clearance 5	0.045 - 0.091 (0.0018 - 0.0036)

- If the tip clearance (2) exceeds the limit, replace rotor set.
- If body to rotor clearances (1, 3, 4, 5) exceed the limit, replace oil pump body assembly.

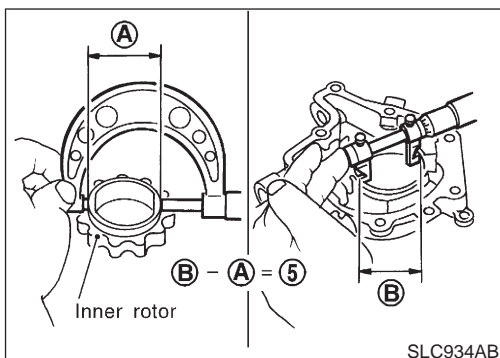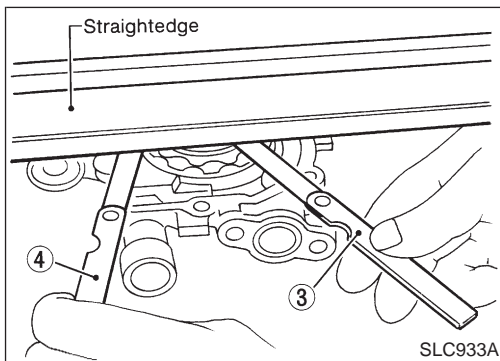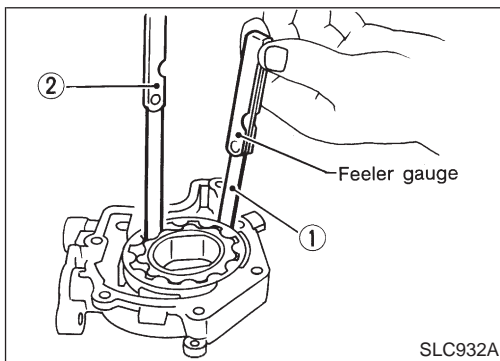

ENGINE LUBRICATION SYSTEM

Oil Pump (Cont'd)

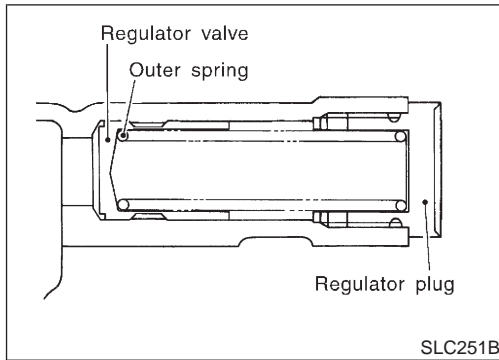


REGULATOR VALVE INSPECTION

NFLC0008

1. Visually inspect components for wear and damage.
2. Check oil pressure regulator valve sliding surface and valve spring.
3. Coat regulator valve with engine oil. Check that it falls smoothly into the valve hole by its own weight.

If damaged, replace regulator valve set or oil pump body.

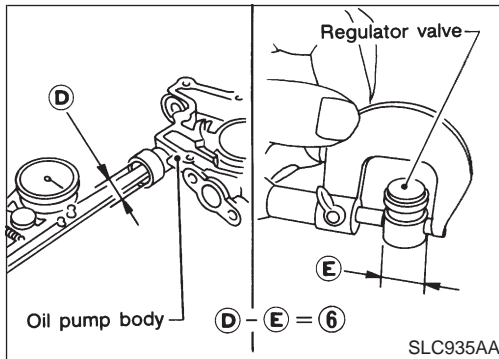


4. Check regulator valve to oil pump body clearance.

Clearance:

6 : 0.040 - 0.097 mm (0.0016 - 0.0038 in)

If it exceeds the limit, replace oil pump body.

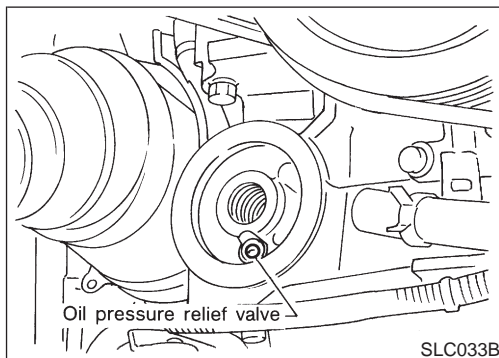


OIL PRESSURE RELIEF VALVE INSPECTION (FOR OIL COOLER)

NFLC0036

Inspect oil pressure relief valve for movement, cracks and breaks by pushing the ball. If replacement is necessary, remove valve by prying it out with suitable tool.

Install a new valve in place by tapping it.

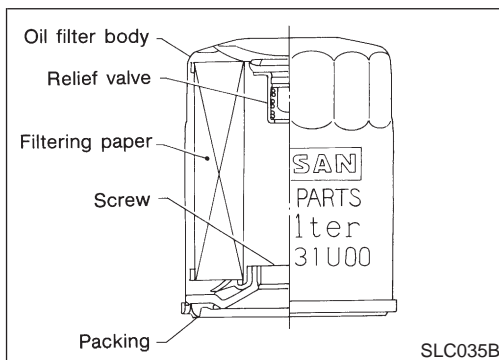

OIL FILTER

NFLC0009


The oil filter is a small, full-flow cartridge type and is provided with a relief valve.

- Use Tool specified in *MA-21* for changing oil filter.

Oil Cooler REMOVAL AND INSTALLATION

NFLC0037

SEC. 150-213

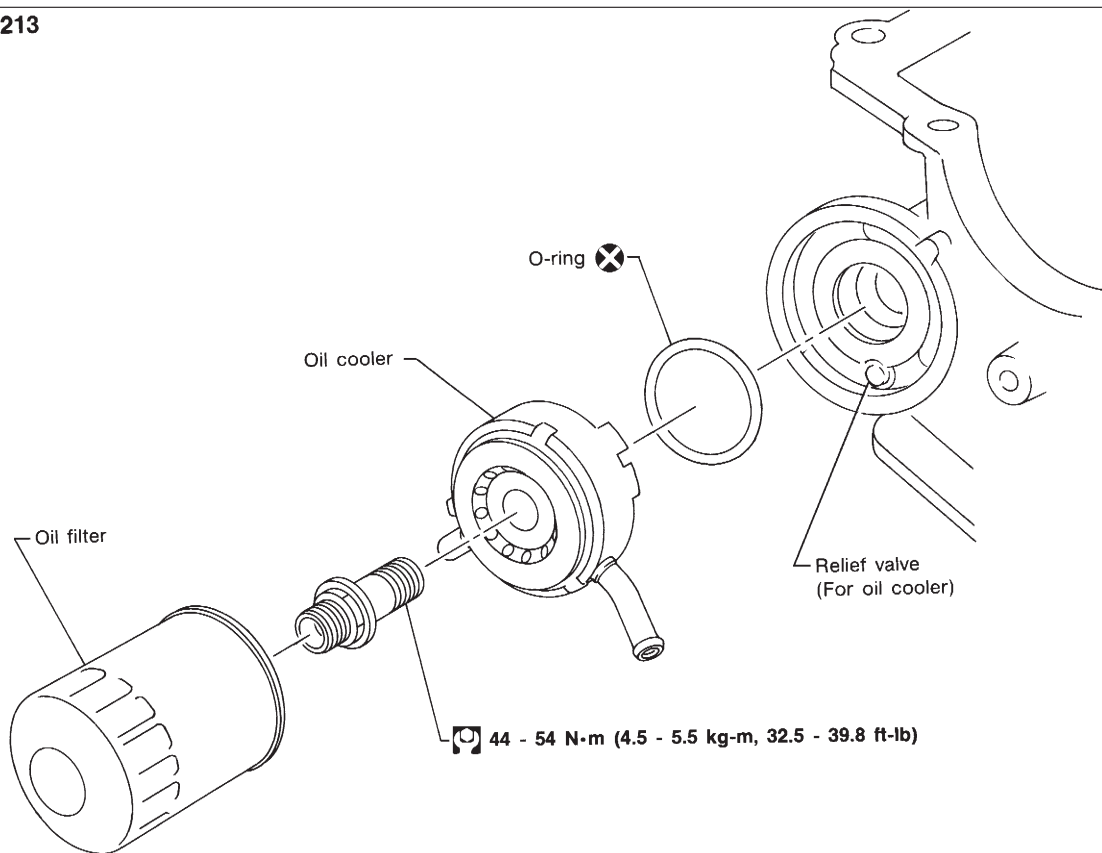

SLC032B

1. Drain engine oil and coolant.
 2. Remove oil cooler.
 3. Installation is in reverse order of removal.
- **Do not spill coolant on the drive belt.**

Inspection

Oil Cooler

NFLC0037S01

NFLC0037S0101

1. Check oil cooler for cracks.
2. Check oil cooler for clogging by blowing through coolant inlet. If necessary, replace oil cooler assembly.

Oil Pressure Relief Valve

NFLC0037S0102

Inspect oil pressure relief valve for movement, cracks and breaks by pushing the ball. If replacement is necessary, remove valve by prying it out with a suitable tool. Install a new valve in place by tapping it.

ENGINE LUBRICATION SYSTEM

Service Data and Specifications (SDS)

Service Data and Specifications (SDS)

OIL PRESSURE

=NFLC0010

Engine speed rpm	Approximate discharge pressure kPa (bar, kg/cm ² , psi)
Idle speed 2,000	More than 69 (0.69, 0.7, 10) 390 (3.90, 3.98, 56.6)

REGULATOR VALVE

NFLC0011
Unit: mm (in)

Regulator valve to oil pump cover clearance	0.040 - 0.097 (0.0016 - 0.0038)
---	---------------------------------



OIL PUMP

NFLC0012
Unit: mm (in)

Body to outer rotor radial clearance	0.114 - 0.200 (0.0045 - 0.0079)
Inner rotor to outer rotor tip clearance	Below 0.18 (0.0071)
Body to inner rotor axial clearance	0.030 - 0.070 (0.0012 - 0.0028)
Body to outer rotor axial clearance	0.050 - 0.110 (0.0020 - 0.0043)
Inner rotor to brazed portion of housing clearance	0.045 - 0.091 (0.0018 - 0.0036)

ENGINE COOLING SYSTEM

Precautions

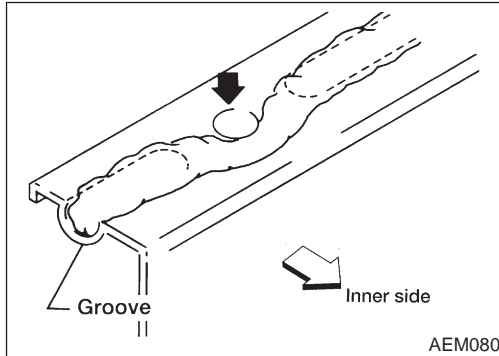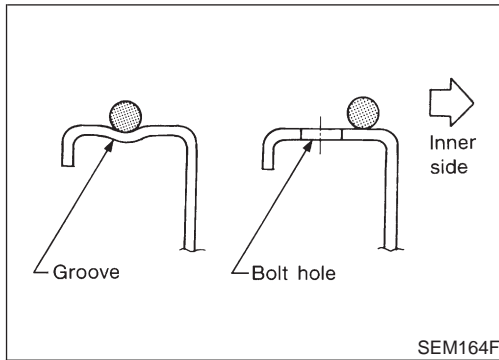

Precautions

LIQUID GASKET APPLICATION PROCEDURE





NFLC0013

1. Use a scraper to remove all traces of old liquid gasket from mating surfaces and grooves. Also, completely clean any oil from these areas.
2. Apply a continuous bead of liquid gasket to mating surfaces. **(Use Genuine Liquid Gasket or equivalent.)**
 - For oil pan, be sure liquid gasket diameter is 4.0 to 5.0 mm (0.157 to 0.197 in).
 - For areas except oil pan, be sure liquid gasket diameter is 2.0 to 3.0 mm (0.079 to 0.118 in).
3. Apply liquid gasket around the inner side of bolt holes (unless otherwise specified).
4. Assembly should be done within 5 minutes after coating.
5. Wait at least 30 minutes before refilling engine oil and engine coolant.

Preparation

SPECIAL SERVICE TOOLS

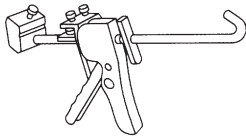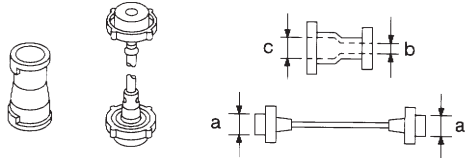NFLC0014



Tool number Tool name	Description
WS39930000 Tube pressure	 <p>Pressing the tube of liquid gasket</p> <p>NT052</p>
EG17650301 Radiator cap tester adapter	 <p>Adapting radiator cap tester to radiator filler neck a: 28 (1.10) dia. b: 31.4 (1.236) dia. c: 41.3 (1.626) dia. Unit: mm (in)</p> <p>NT564</p>
KV99103510 Radiator plate pliers A	 <p>Installing radiator upper and lower tanks</p> <p>NT224</p>
KV99103520 Radiator plate pliers B	 <p>Removing radiator upper and lower tanks</p> <p>NT225</p>

ENGINE COOLING SYSTEM

Cooling Circuit

Cooling Circuit

NFLC0015

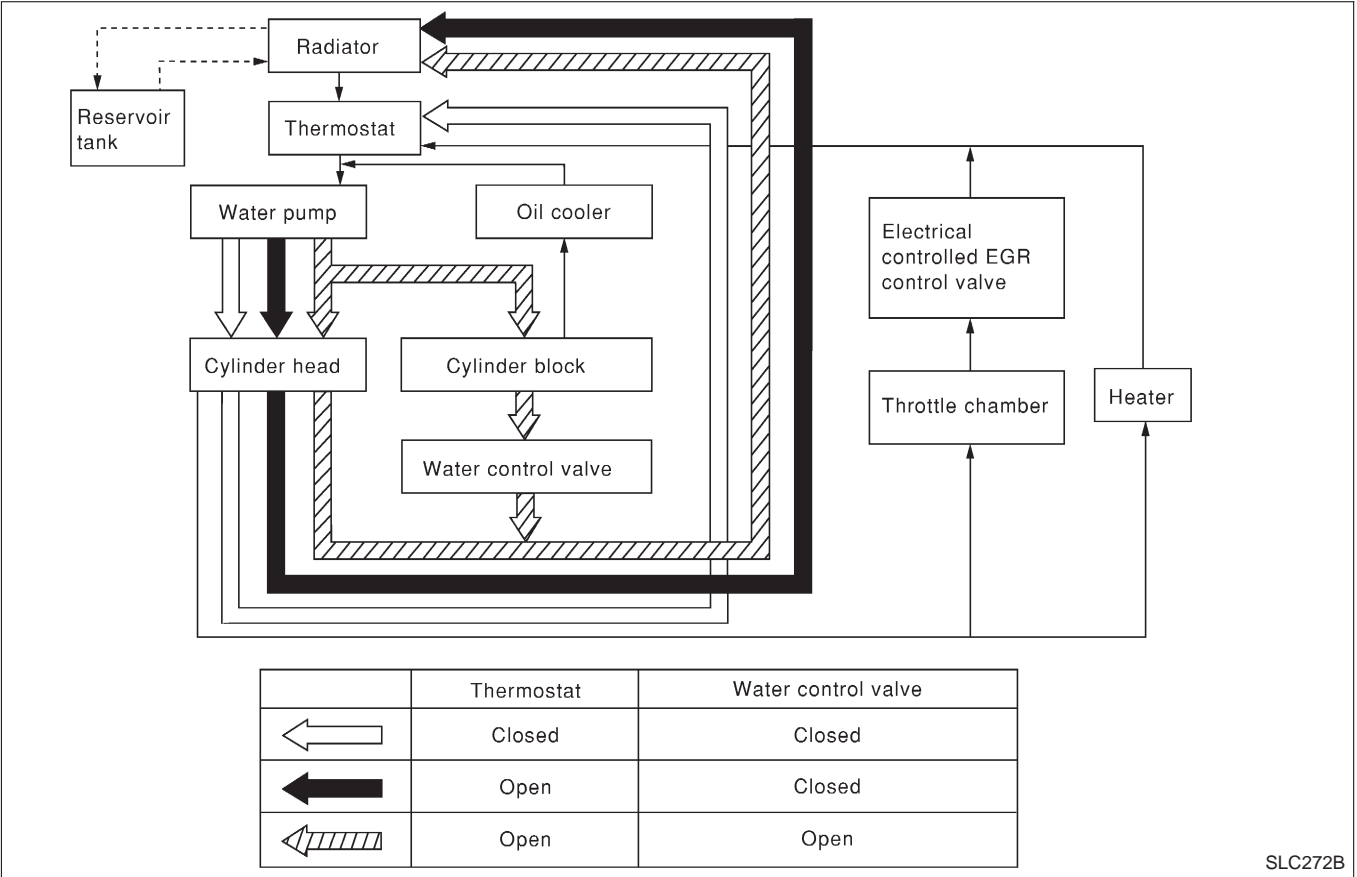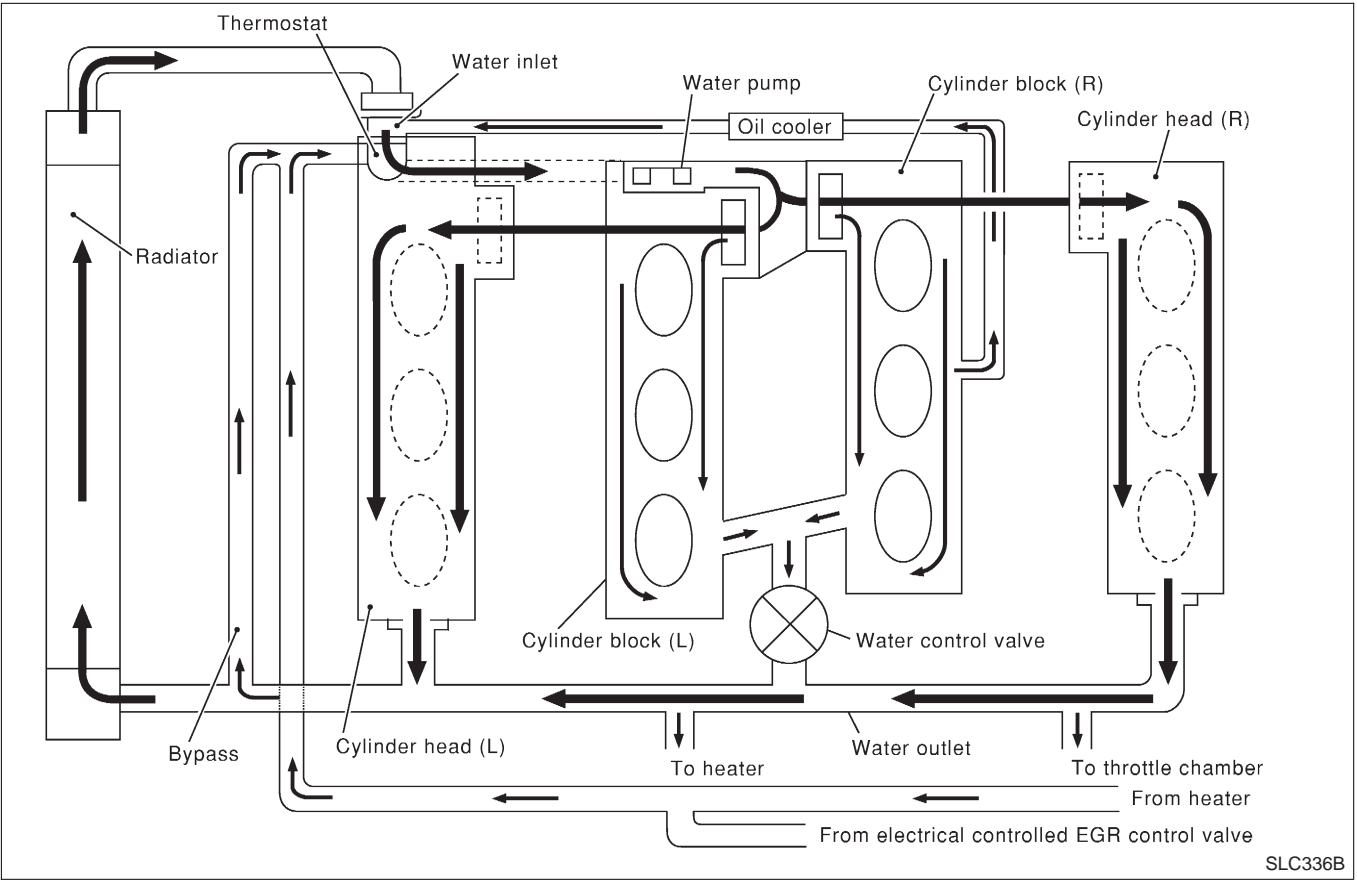

System Check

NFLC0016

WARNING:

Never remove the radiator cap when the engine is hot; serious burns could be caused by high pressure fluid escaping from the radiator.

Wrap a thick cloth around the cap and carefully remove it by turning it a quarter turn to allow built-up pressure to escape and then turn the cap all the way off.

CHECKING COOLING SYSTEM HOSES

NFLC0016S01


Check hoses for improper attachment, leaks, cracks, damage, loose connections, chafing and deterioration.

CHECKING RADIATOR

NFLC0016S02

Check radiator for mud or clogging. If necessary, clean radiator as follows.

- Be careful not to bend or damage the radiator fins.
 - When radiator is cleaned without removal, remove all surrounding parts such as cooling fan, radiator shroud and horns. Then tape the harness and connectors to prevent water from entering.
1. Apply water by hose to the back side of the radiator core vertically downward.
 2. Apply water again to all radiator core surfaces once per minute.
 3. Stop washing if any stains no longer flow out from the radiator.
 4. Blow air into the back side of radiator core vertically downward.
 - Use compressed air lower than 490 kPa (4.9 bar, 5 kg/cm², 71 psi) and keep distance more than 30 cm (11.8 in).
 5. Blow air again into all the radiator core surfaces once per minute until no water sprays out.

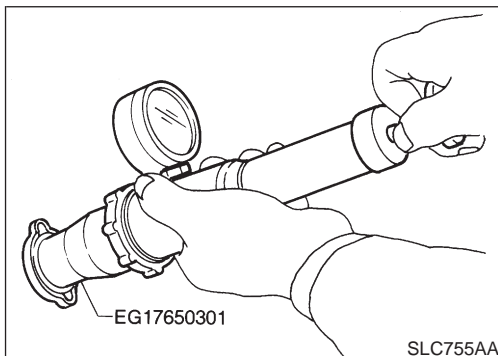

CHECKING RADIATOR CAP

NFLC0016S03

To check radiator cap, apply pressure to cap with a tester.

Radiator cap relief pressure:

Standard


78 - 98 kPa

(0.78 - 0.98 bar, 0.8 - 1.0 kg/cm², 11 - 14 psi)

Limit

59 - 98 kPa


(0.59 - 0.98 bar, 0.6 - 1.0 kg/cm², 9 - 14 psi)

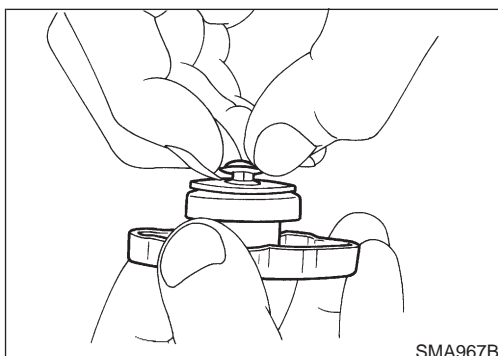

Pull the negative pressure valve to open it. Check that it closes completely when released.

ENGINE COOLING SYSTEM

System Check (Cont'd)

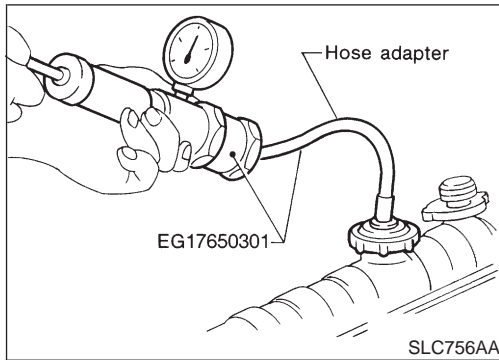

CHECKING COOLING SYSTEM FOR LEAKS

NFLC0016S04

To check for leakage, apply pressure to the cooling system with a tester.

Testing pressure:

157 kPa (1.57 bar, 1.6 kg/cm², 23 psi)


The pressure should not drop.

CAUTION:

Higher than the specified pressure may cause radiator damage.

Water Pump COMPONENTS


NFLC0017

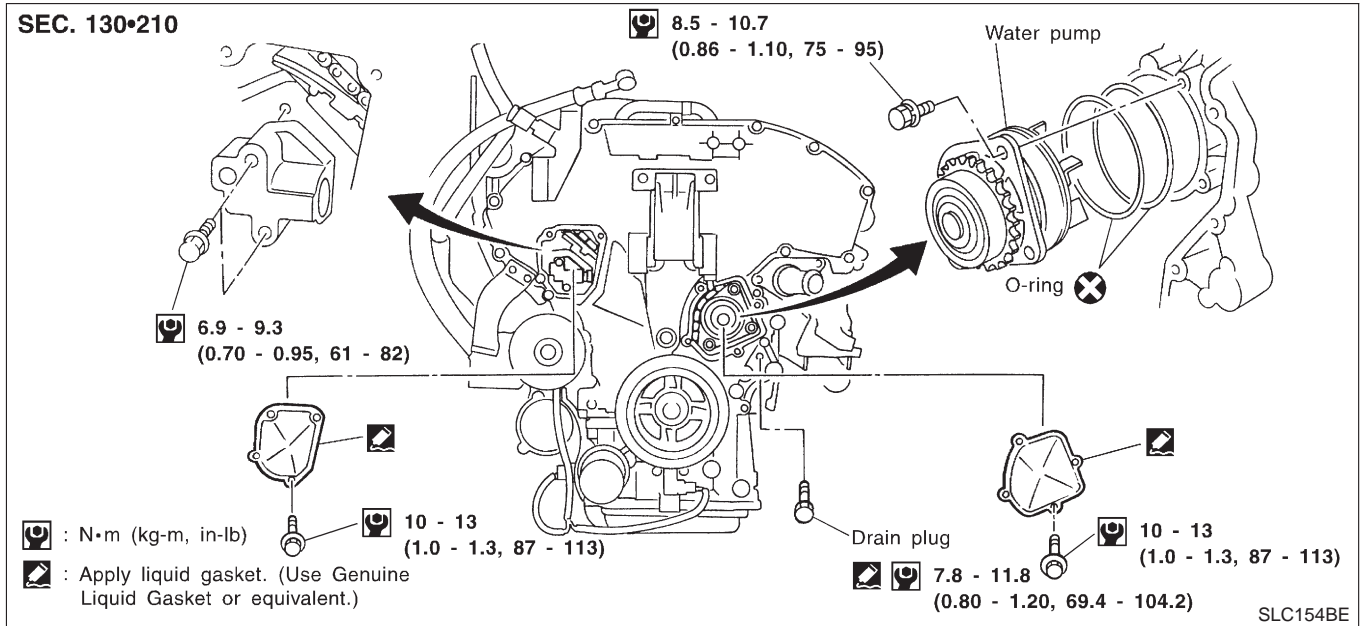

SLC154BE

CAUTION:

- When removing water pump assembly, be careful not to get coolant on drive belt.
- Water pump cannot be disassembled and should be replaced as a unit.
- After installing water pump, connect hose and clamp securely, then check for leaks using radiator cap tester.

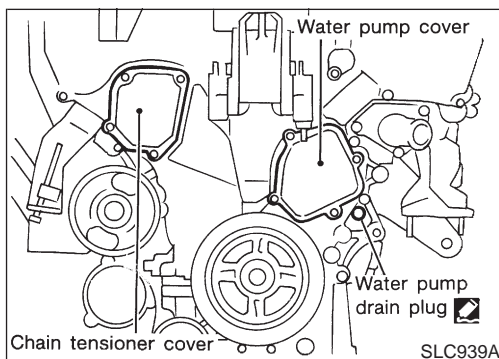


REMOVAL

NFLC0018



1. Drain coolant from drain plugs on radiator and both sides of cylinder block. Refer to **MA-16**, "Changing Engine Coolant".
2. Remove right side engine mounting, mounting bracket and nuts.
3. Remove drive belts and idler pulley bracket.
4. Remove water pump drain plug.
5. Remove chain tensioner cover and water pump cover.

ENGINE COOLING SYSTEM


Water Pump (Cont'd)

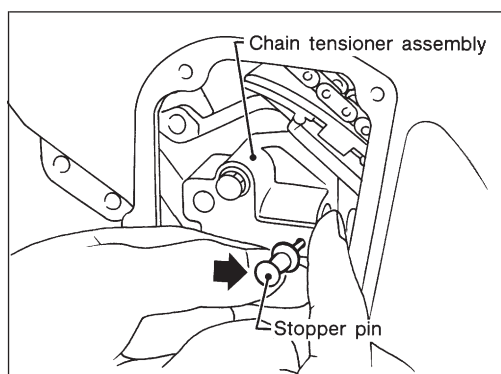

6. Pushing timing chain tensioner sleeve, apply a stopper pin so it does not return. Then remove the chain tensioner assembly.

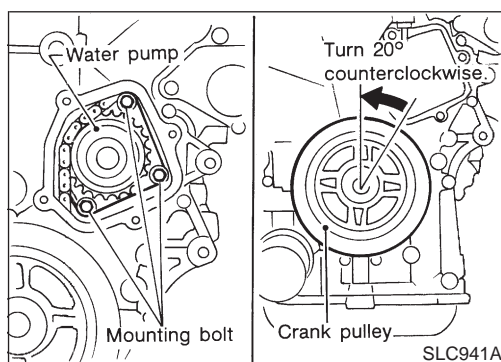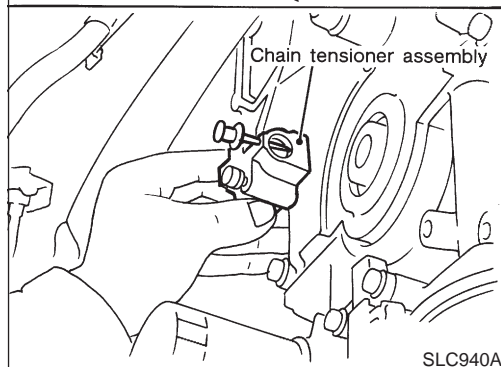




7. Remove the 3 water pump fixing bolts. Secure a gap between water pump gear and timing chain, by turning crankshaft pulley 20° backwards.

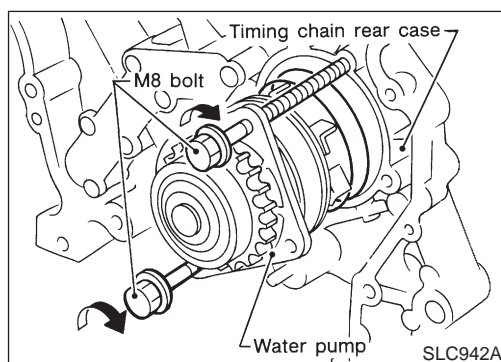

8. Put M8 bolts to two M8-threaded holes out of 3 water pump fixing bolt holes.


ENGINE COOLING SYSTEM

Water Pump (Cont'd)

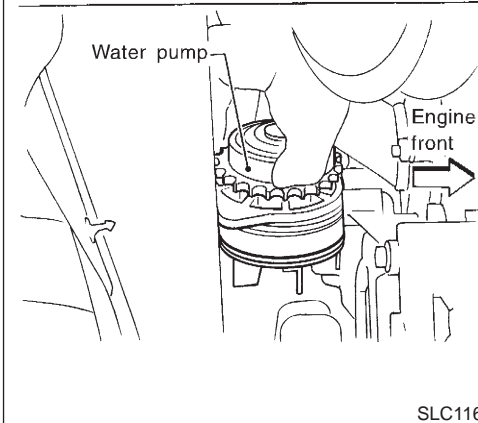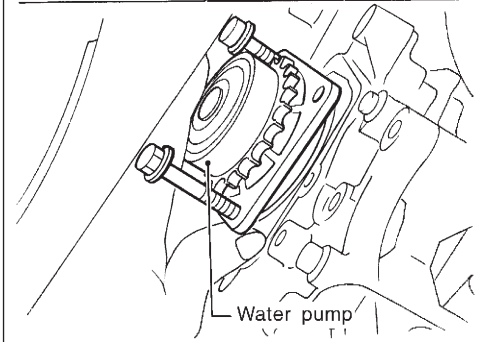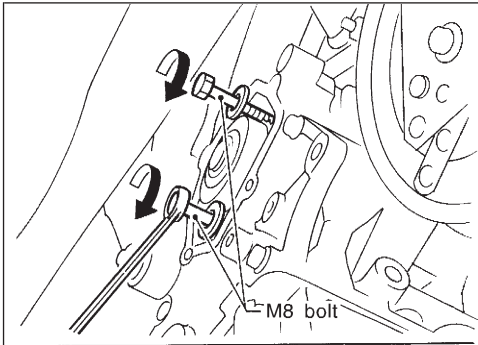

SLC116B

9. Tighten M8 bolts by turning half turn alternately until they reach timing chain rear case.
 - In order to prevent damages to water pump or timing chain rear case, do not tighten one bolt continuously. Always turn each bolt half turn each time.
10. Lift up water pump and remove it.
 - When lifting up water pump, do not allow water pump gear to hit timing chain.

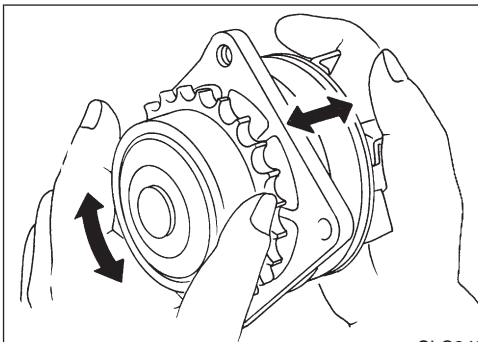


SLC943A

INSPECTION

1. Check for badly rusted or corroded body assembly.
2. Check for rough operation due to excessive end play.

NFLC0019

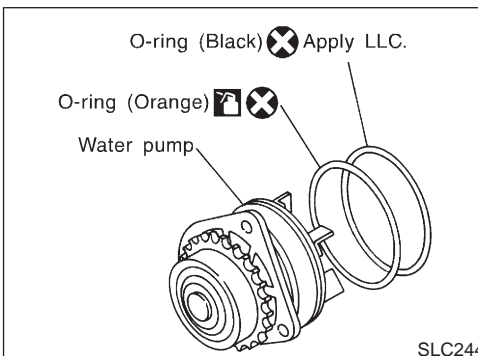

SLC244B


INSTALLATION

1. Apply engine oil and coolant to O-rings as shown in the figure.


NFLC0020

ENGINE COOLING SYSTEM


Water Pump (Cont'd)

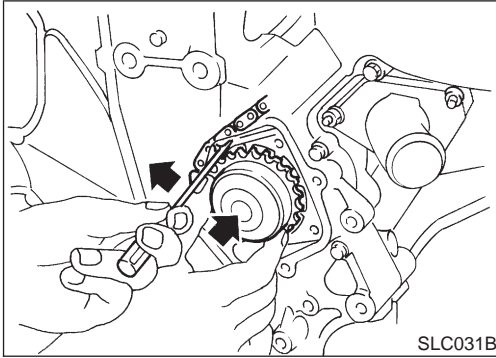


2. Install water pump.
 - **Do not allow cylinder block to nip O-rings when installing water pump.**

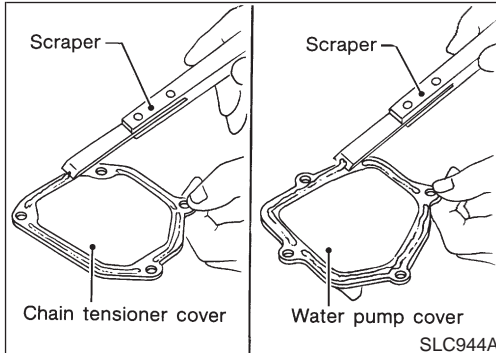


3. Before installing, remove all traces of liquid gasket from mating surface of water pump cover and chain tensioner cover using a scraper.
Also remove traces of liquid gasket from mating surface of front cover.

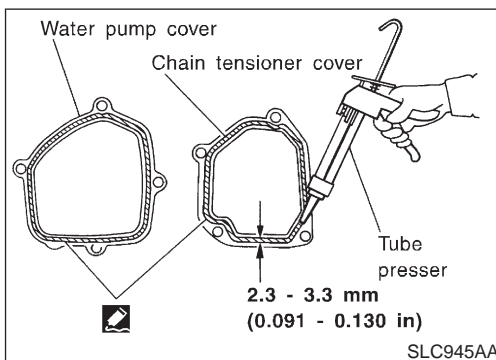

4. Apply a continuous bead of liquid gasket to mating surface of chain tensioner cover and water pump cover.

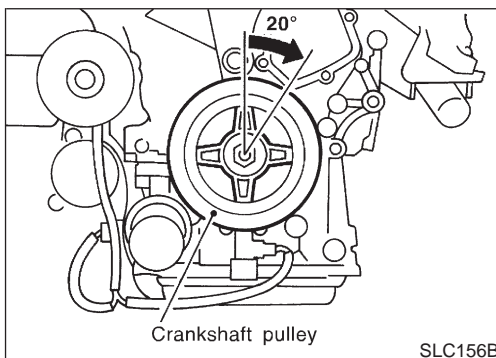

5. Return the crankshaft pulley to its original position by turning it 20° forward.

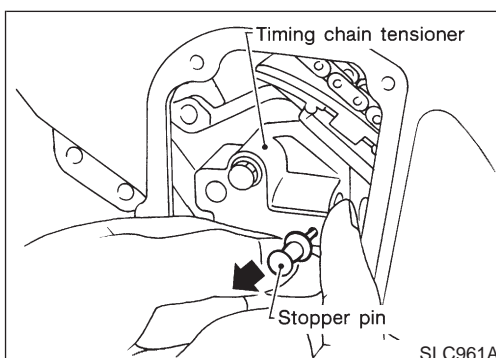

6. Install timing chain tensioner, then remove the stopper pin.
 - **When installing the timing chain tensioner, engine oil should be applied to the oil hole and tensioner.**
 - **After starting engine, let idle for three minutes, then rev engine up to 3,000 rpm under no load to purge air from the high-pressure chamber of the chain tensioners. The engine may produce a rattling noise. This indicates that air still remains in the chamber and is not a matter of concern.**
7. Install drain plug on cylinder block.
8. Reinstall any parts removed in reverse order of removal.


ENGINE COOLING SYSTEM

Thermostat


Thermostat REMOVAL AND INSTALLATION

NFLC0021

SEC. 210

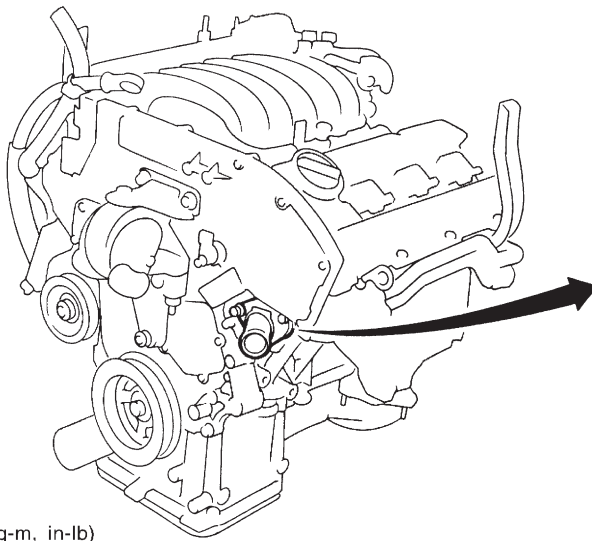


: N·m (kg-m, in-lb)

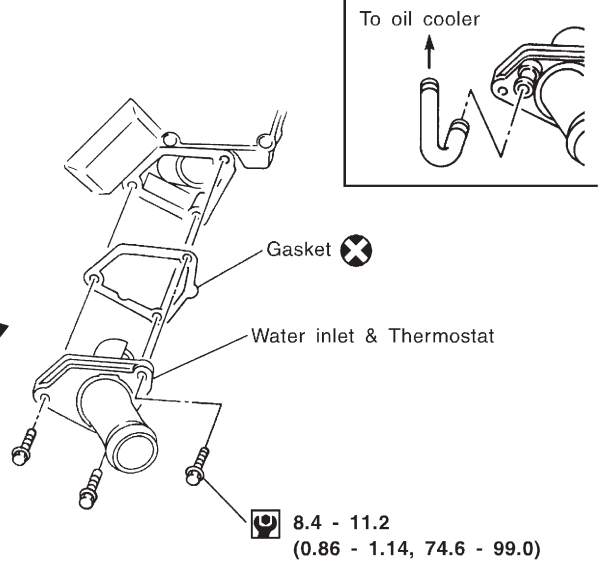


SLC270B

Thermostat assembly

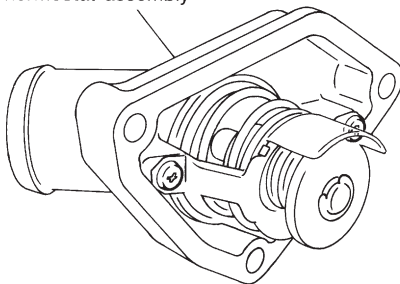

SLC962AA

UP

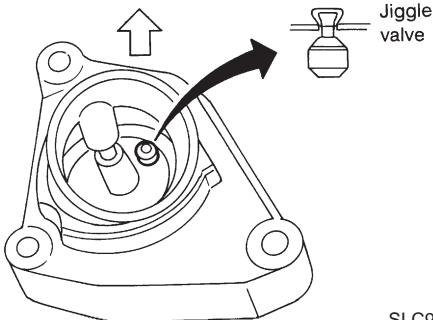

SLC948A

1. Drain coolant from drain plugs on radiator and both sides of cylinder block.
2. Remove drive belts and idler pulley bracket.
3. Remove water pump drain plug on pump side of cylinder block.
4. Remove lower radiator hose.
5. Remove water inlet and thermostat assembly.
 - **Do not disassemble water inlet and thermostat. Replace them as a unit, if necessary.**
6. Install thermostat with jiggle valve facing upward.
 - **After installation, run engine for a few minutes, and check for leaks.**
 - **Be careful not to spill coolant over engine compartment. Use a rag to absorb coolant.**


INSPECTION

NFLC0022

1. Check valve seating condition at ordinary room temperatures. It should seat tightly.
2. Check valve opening temperature and maximum valve lift.

	Standard
Valve opening temperature	82°C (180°F)
Valve lift	More than 8.6 mm/95°C (0.339 in/203°F)

SLC949A

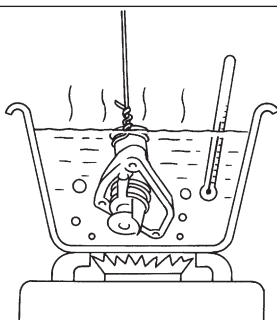


ENGINE COOLING SYSTEM

Water Control Valve

3. Then check if valve closes at 5°C (9°F) below valve opening temperature.

Water Control Valve REMOVAL AND INSTALLATION

NFLC0032

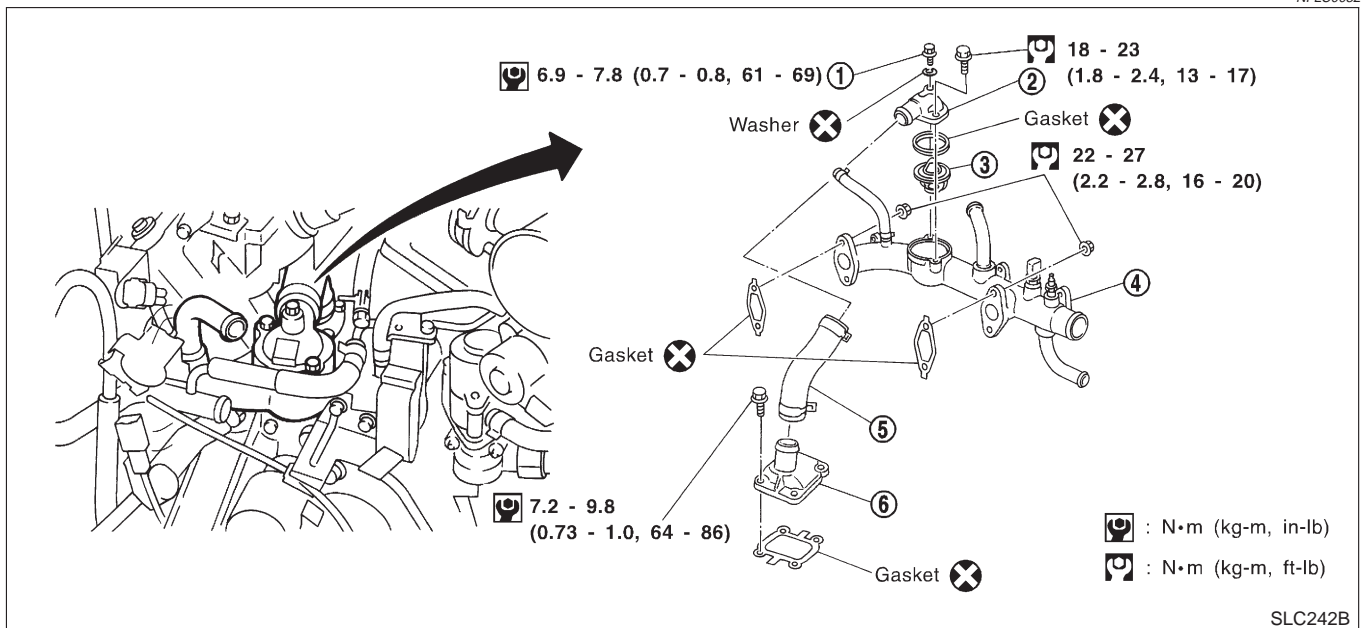

1. Air relief plug
2. Water connector


3. Water control valve
4. Water outlet

5. Water hose
6. Cylinder block water outlet

1. Drain coolant from drain plugs on radiator and both sides of cylinder block.
2. Remove water connector and water control valve.
3. Install water control valve and water connector.
 - **After installation, run engine for a few minutes, and check for leaks.**
 - **Be careful not to spill coolant over engine compartment. Use a rag to absorb coolant.**

ENGINE COOLING SYSTEM

Water Control Valve (Cont'd)

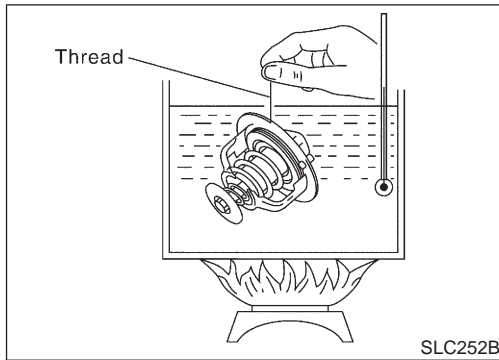

INSPECTION

NFLC0033

1. Check valve seating condition at ordinary room temperatures. It should seat tightly.
2. Check valve opening temperature and maximum valve lift.

	Standard
Valve opening temperature	95°C (203°F)
Valve lift	More than 8.0 mm/108°C (0.315 in/226°F)

3. Then check if valve closes at 5°C (9°F) below valve opening temperature.

Radiator

REMOVAL AND INSTALLATION

NFLC0023


1. Remove under cover.
2. Drain coolant from radiator.
3. Disconnect radiator upper and lower hoses.
4. Remove radiator shroud.
5. Remove A/T oil cooler hoses. (A/T models only)
6. Disconnect reservoir tank hose.
7. Remove radiator mounting bracket.
8. Remove radiator.
9. After repairing or replacing radiator, install any part removed in reverse order of removal.

When filling radiator with coolant, refer to MA-16, "Changing Engine Coolant".

ENGINE COOLING SYSTEM

Radiator (Cont'd)

SEC. 214

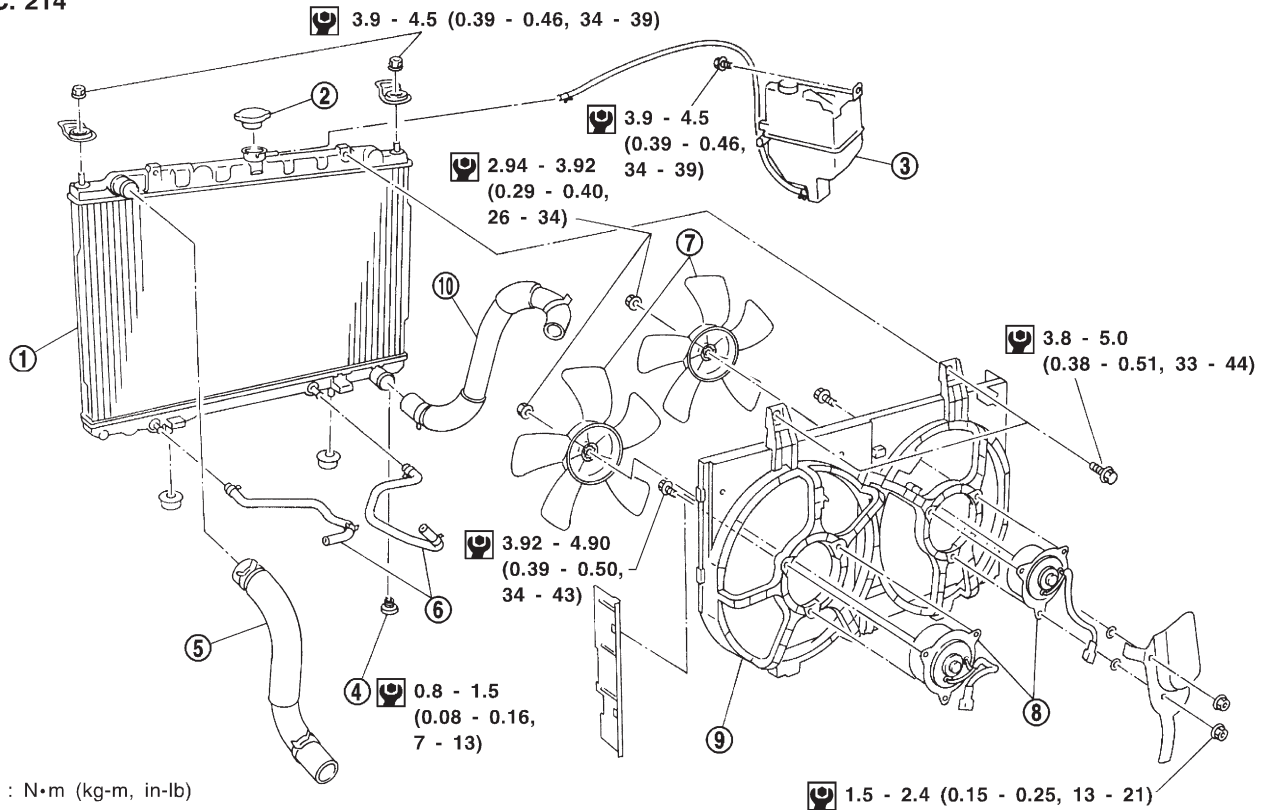

SLC281B

- | | | |
|------------------------|----------------------------------|-------------------------|
| 1. Radiator | 5. Upper radiator hose | 8. Cooling fan motors |
| 2. Radiator filler cap | 6. Oil cooler hoses (A/T models) | 9. Radiator shroud |
| 3. Reservoir tank | 7. Cooling fans | 10. Lower radiator hose |
| 4. Radiator drain cock | | |

Cooling Fan Control System

Cooling fans are controlled by ECM. For details, refer to ^{NFLC0024}**EC-366**.

Refilling Engine Coolant

For details on refilling engine coolant, refer to ^{NFLC0034}**MA-17**, "REFILLING ENGINE COOLANT".



ENGINE COOLING SYSTEM

Radiator (Aluminum type)

Radiator (Aluminum type) PREPARATION

NFLC0025

SEC. 214

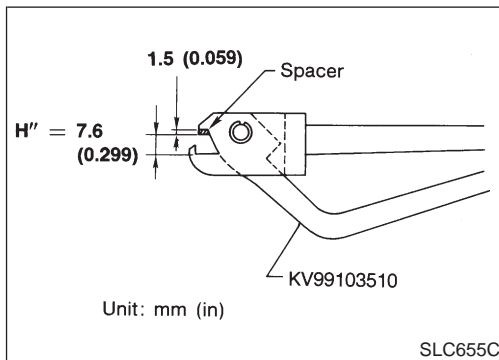
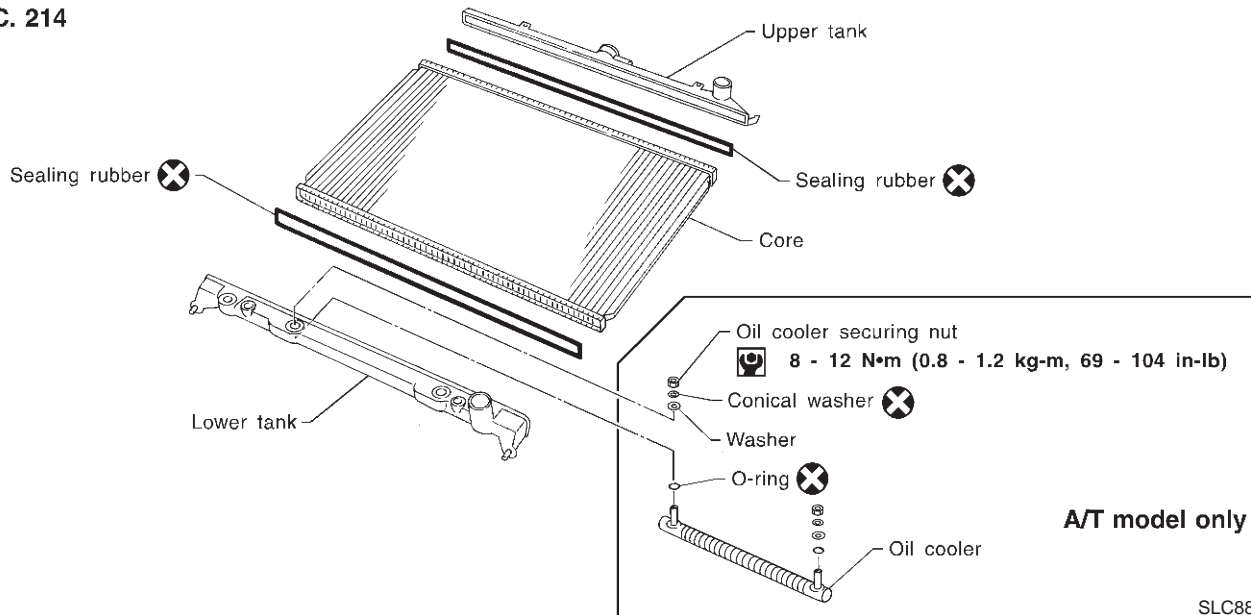


1. Attach the spacer to the tip of the radiator plate pliers A. Spacer specification: 1.5 mm (0.059 in) thick x 18 mm (0.71 in) wide x 8.5 mm (0.335 in) long.
 2. Make sure that when radiator plate pliers A are closed dimension H'' is approx. 7.6 mm (0.299 in).
 3. Adjust dimension H'' with the spacer, if necessary.
- If the radiator core rims cannot be crimped as specified, further modification of the radiator plate pliers A is required. Refer to the Technical Bulletin LC91-001.

DISASSEMBLY

NFLC0026


1. Remove tank with Tool.

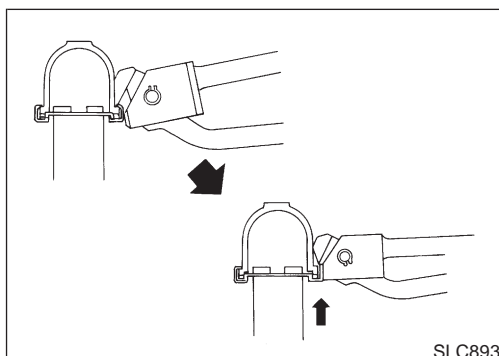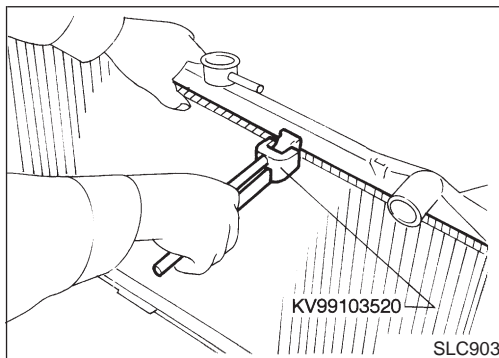

- Grip the crimped edge and bend it upwards so that Tool slips off.
Do not bend excessively.


ENGINE COOLING SYSTEM

Radiator (Aluminum type) (Cont'd)

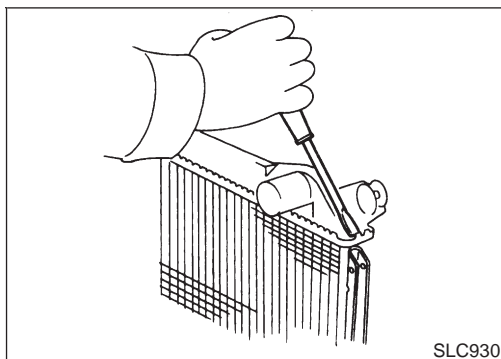


- In areas where Tool cannot be used, use a screwdriver to bend the edge up.

Be careful not to damage tank.

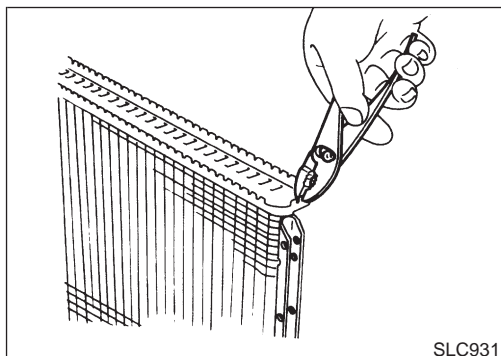

2. Make sure the edge stands straight up.
3. Remove oil cooler from tank. (A/T models only)

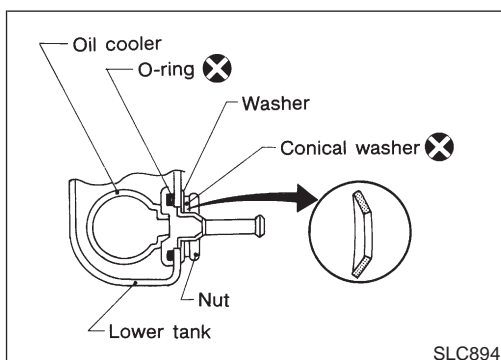


ASSEMBLY


1. Install oil cooler. (A/T models only)

Pay attention to direction of conical washer.

NFLC0027

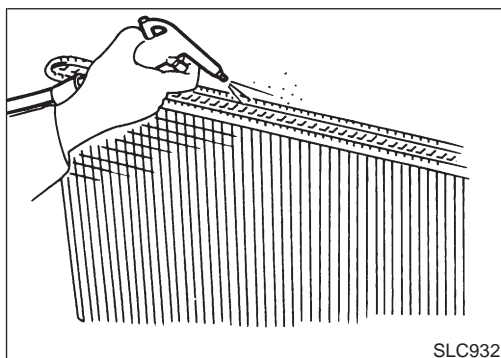

2. Clean contact portion of tank.

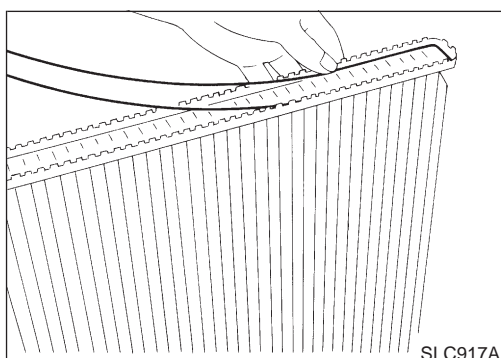


3. Install sealing rubber.



Push it in with fingers.
Be careful not to twist sealing rubber.

ENGINE COOLING SYSTEM


Radiator (Aluminum type) (Cont'd)

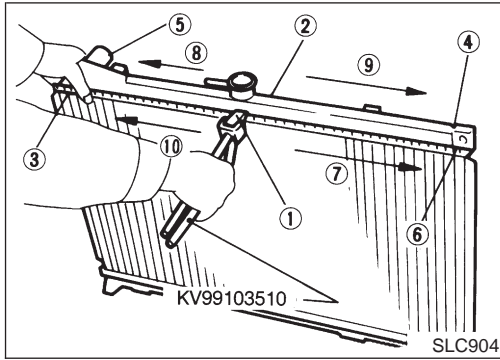

4. Caulk tank in specified sequence with Tool.

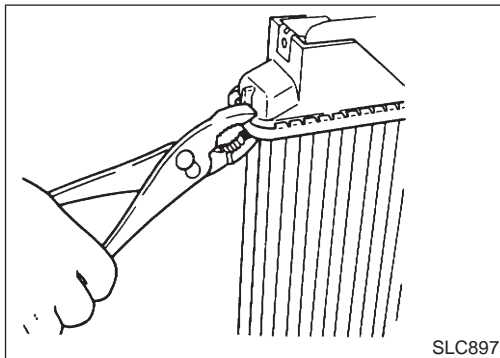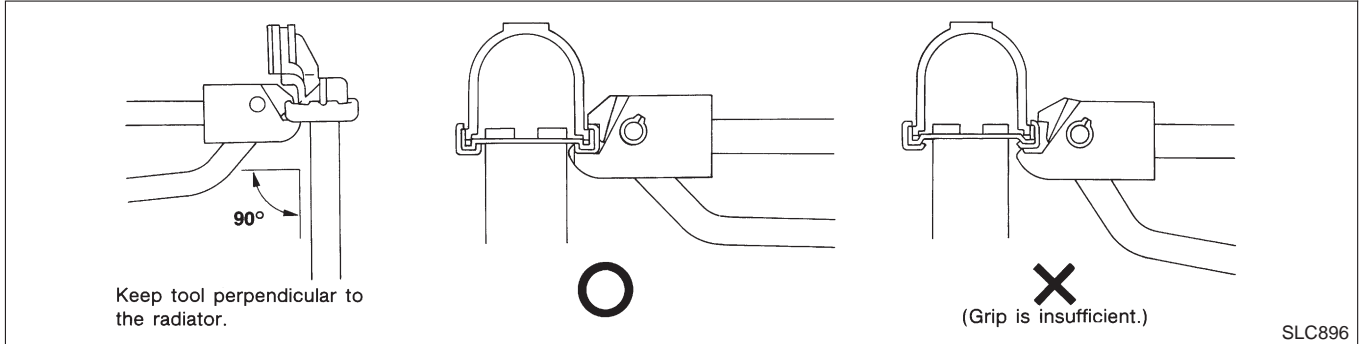

- Use pliers in the locations where Tool cannot be used.

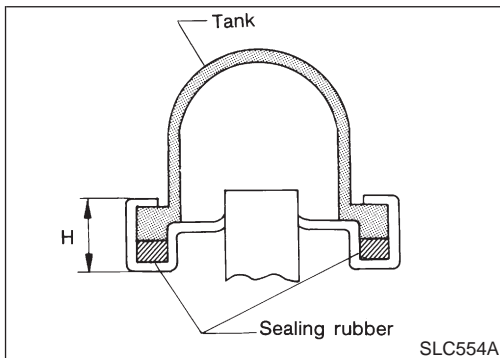


5. Make sure that the rim is completely crimped down.

Standard height "H":

8.0 - 8.4 mm (0.315 - 0.331 in)

6. Confirm that there is no leakage.

Refer to Inspection.

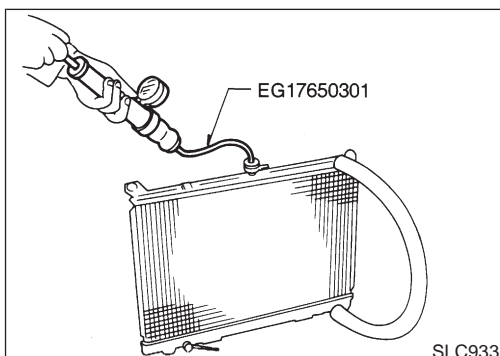

INSPECTION

Apply pressure with Tool.

Specified pressure value:

157 kPa (1.57 bar, 1.6 kg/cm², 23 psi)

WARNING:

To prevent the risk of the hose coming undone while under pressure, securely fasten it down with a hose clamp. Attach a hose to the oil cooler as well. (A/T models only)

NFLC0028

ENGINE COOLING SYSTEM

Overheating Cause Analysis

Overheating Cause Analysis

NFLC0029

	Symptom		Check items	
Cooling system parts malfunction	Poor heat transfer	Water pump malfunction	Worn or loose drive belt	—
		Thermostat stuck closed	—	
		Damaged fins	Dust contamination or paper clogging	
			Mechanical damage	
		Clogged radiator cooling tube	Excess foreign material (rust, dirt, sand, etc.)	
	Reduced air flow	Cooling fan does not operate	—	—
		High resistance to fan rotation		
		Damaged fan blades		
	Damaged radiator shroud	—	—	—
	Improper coolant mixture ratio	—	—	—
	Poor coolant quality	—	—	—
	Insufficient coolant	Coolant leaks	Cooling hose	Loose clamp
				Cracked hose
			Water pump	Poor sealing
			Radiator cap	Loose
				Poor sealing
			Radiator	O-ring for damage, deterioration or improper fitting
				Cracked radiator tank
				Cracked radiator core
			Reservoir tank	Cracked reservoir tank
		Overflowing reservoir tank	Exhaust gas leaks into cooling system	Cylinder head deterioration
				Cylinder head gasket deterioration

ENGINE COOLING SYSTEM

Overheating Cause Analysis (Cont'd)

	Symptom		Check items	
Except cooling system parts malfunction	—	Overload on engine	Abusive driving	High engine rpm under no load
				Driving in low gear for extended time
				Driving at extremely high speed
			Powertrain system malfunction	—
			Installed improper size wheels and tires	
			Dragging brakes	
			Improper ignition timing	
	Blocked or restricted air flow	Blocked bumper	—	—
		Blocked radiator grille	Installed car brassiere	
			Mud contamination or paper clogging	
		Blocked radiator	—	
		Blocked condenser	—	
		Installed large fog lamp		

Service Data and Specifications (SDS)

THERMOSTAT

NFLC0030

Valve opening temperature	82°C (180°F)
Valve lift	More than 8.6 mm/95°C (0.339 in/203°F)

WATER CONTROL VALVE

NFLC0035

Valve opening temperature	95°C (203°F)
Valve lift	More than 8.0 mm/108°C (0.315 in/226°F)

RADIATOR

NFLC0031

Unit: kPa (bar, kg/cm², psi)

Cap relief pressure	Standard	78 - 98 (0.78 - 0.98, 0.8 - 1.0, 11 - 14)
	Limit	59 - 98 (0.59 - 0.98, 0.6 - 1.0, 9 - 14)
Leakage test pressure		157 (1.57, 1.6, 23)